



LG G Pad F 7.0 Rear Camera Replacement

This guide covers the replacement of the rear camera on the LG G Pad F 7.0

Written By: Matt Kloos



INTRODUCTION

This guide covers how to replace the rear camera on a LG G Pad F 7.0



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Rear Camera




- Open up the SIM port, on the top right corner (screen face down).
- Press the SIM card (white plastic) to pop it out
- Remove SIM card and set aside

Step 2



- Use the plastic opening tool to pry the plastic backing off of the internal block. Start at the location with the SIM port to avoid damage to internal components.
- Do this by finding the seam between the edge of the screen and the plastic backing, and prying between the two.
- Work your way all the way around the edge of the screen, and remove the plastic backing when it is loose.

Step 3

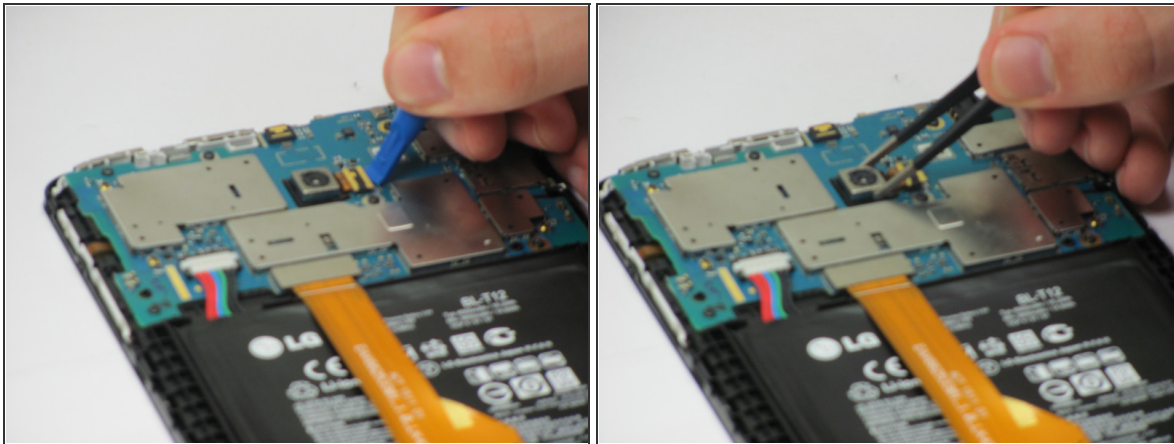

- Use the plastic opening tool to pry up the ribbon cable connecting to the camera unit.
- Once the ribbon cable has been detached, use the tweezers to pull up the camera. It is attached with adhesive so pull up gently to remove it.
- Once the old camera unit is removed, replace with new unit and reassemble in reverse order of guide.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 10:34:28 AM.